


# FM/AM RADIO-TELEVISION P-100EUC

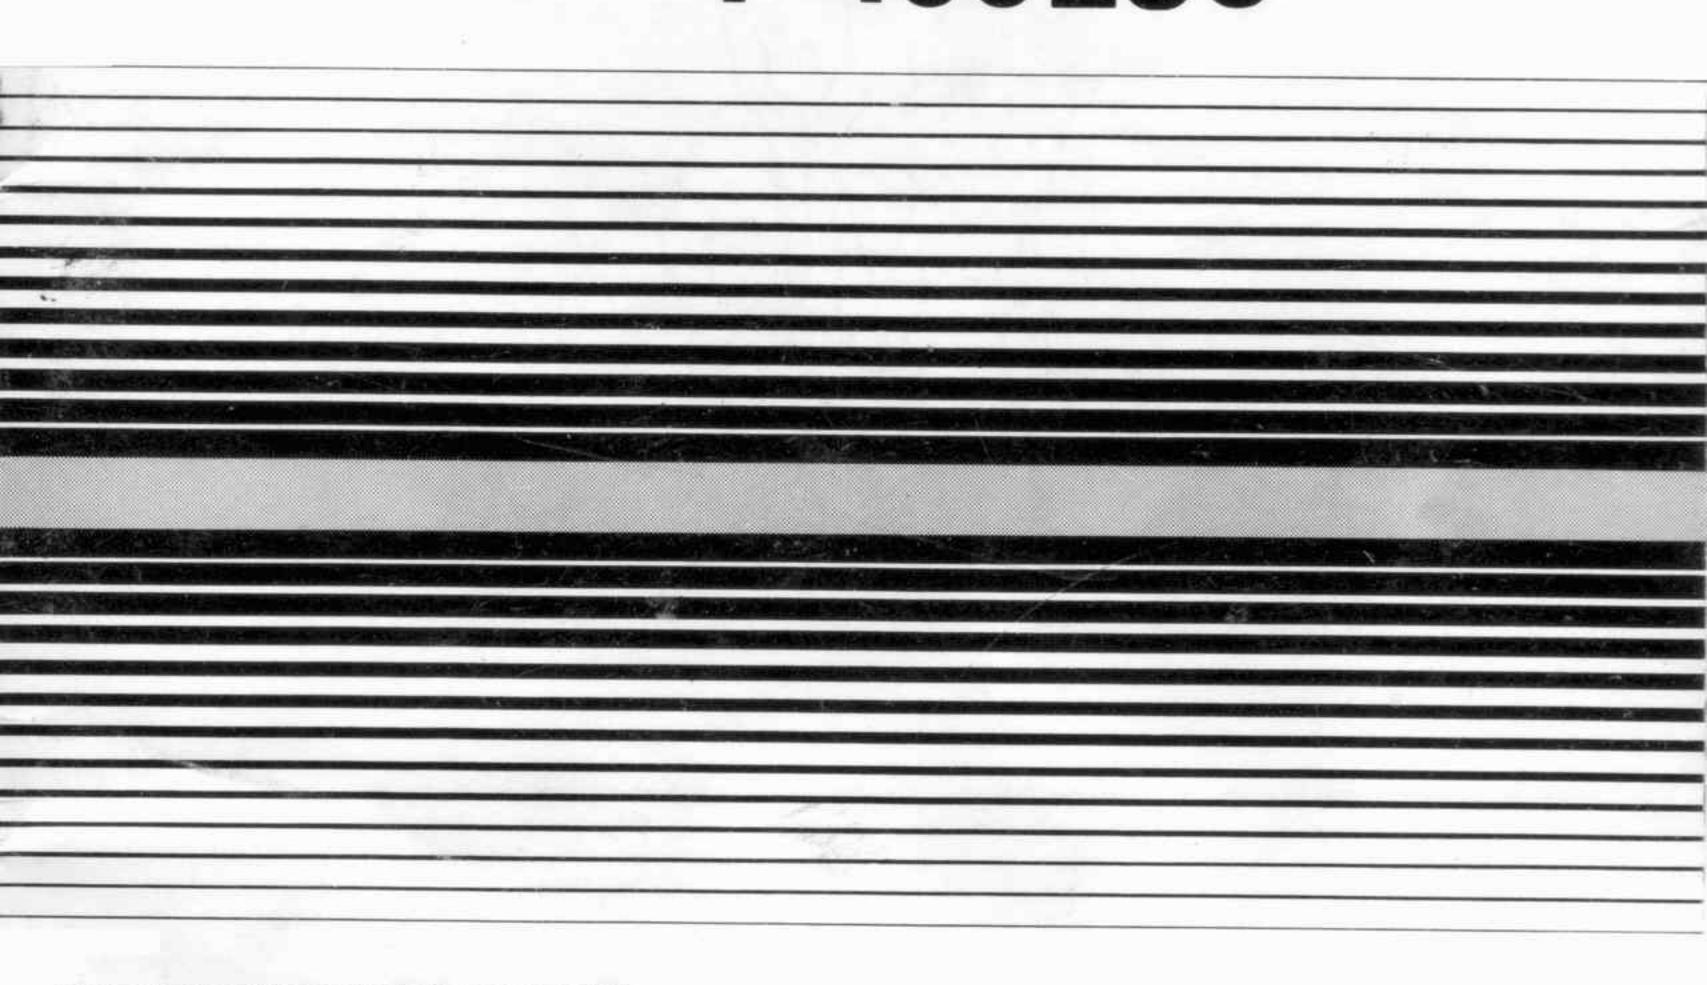

BEDIENUNGSANLEITUNG
UKW/MW-FERNSEHRADIO
TELEVISEUR PORTATIF AVEC
RADIO FM/AM INCORPOREE





We wish to express our appreciation for your purchase JVC FM/AM radio & television Model P-100EUC.


Please read carefully Instruction Booklet before operating your JVC unit.


# CONTENTS


### Contents

Contents												3
Safety Precautions												4,5
Name of Parts and their Fur	nC	ti	or	15			•				•	6,7
Before Using the Set	•	٠.			•		•	•			•	8,9
Power Supply												
Antenna					•							. 12
Viewing the TV												
Listening to the Radio												
Specifications & Accessories												


# SAFETY PRECAUTIONS

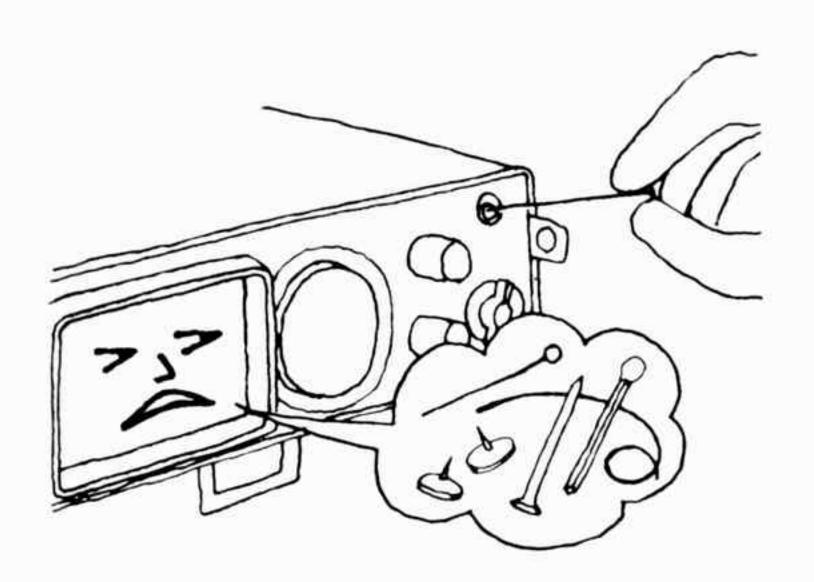

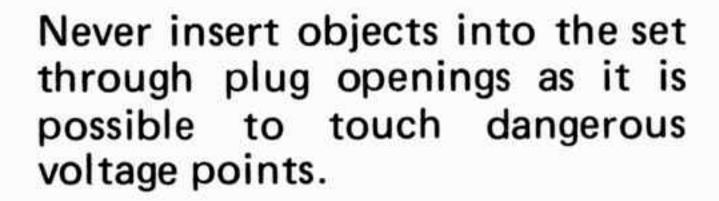


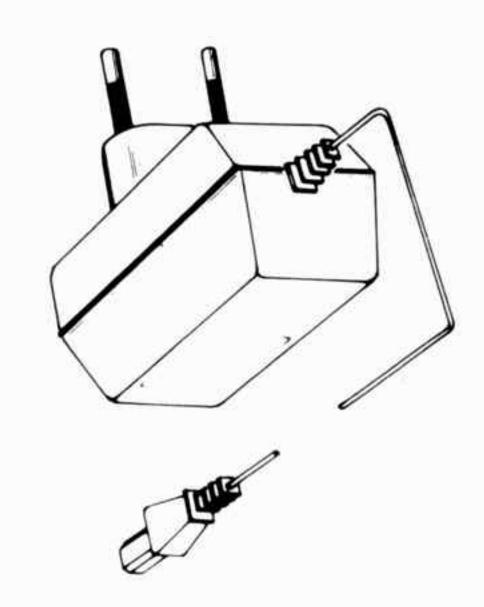


Use surely an AC adaptor Model AA-24LEU supplied or an optional AC power adaptor Model AA-100SEU when operating this set on a house current.

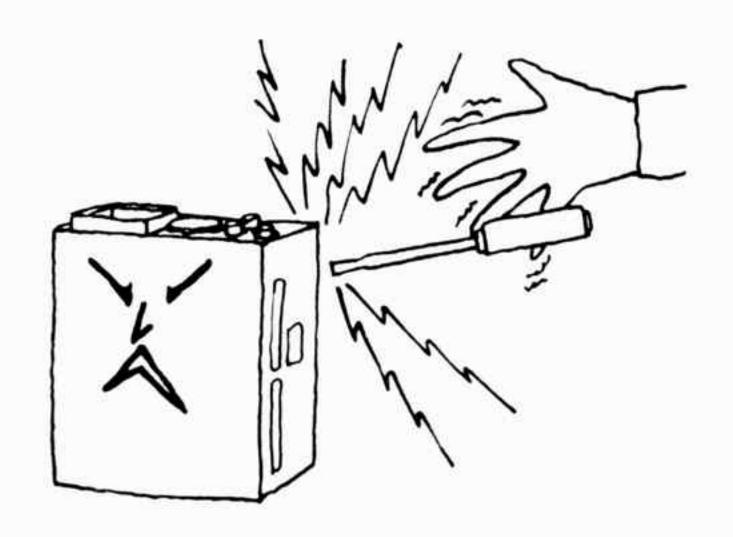


Do not remove the back cover of the set as this can expose you to high voltage.

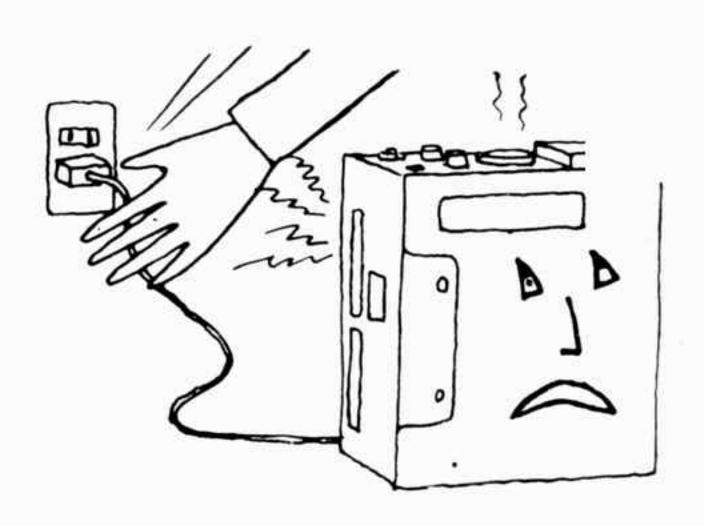


If you are unable to restore normal operation by this manual, turn the set off and call your dealer or service technician.

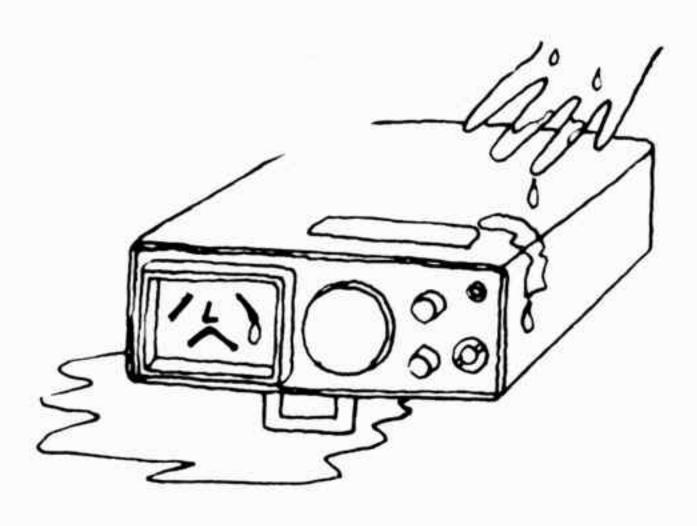

Do not expose the set to rain or moisture while operating on AC current.

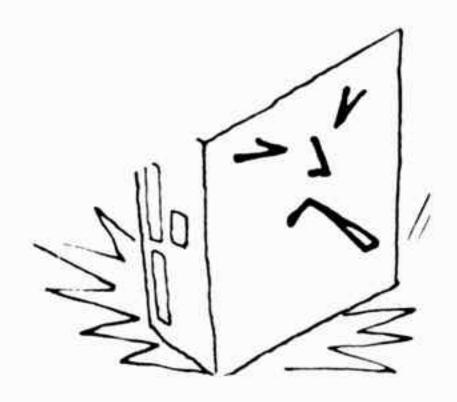


Do not bump or jolt the set, especially the picture tube.

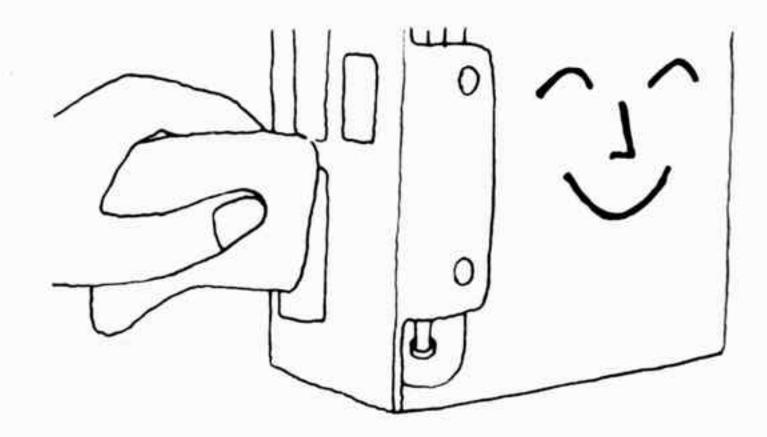


Clean the set, especially the face of the picture tube with a soft cloth soaked in soapy water to remove dirty.

Do not use any other method of cleaning.

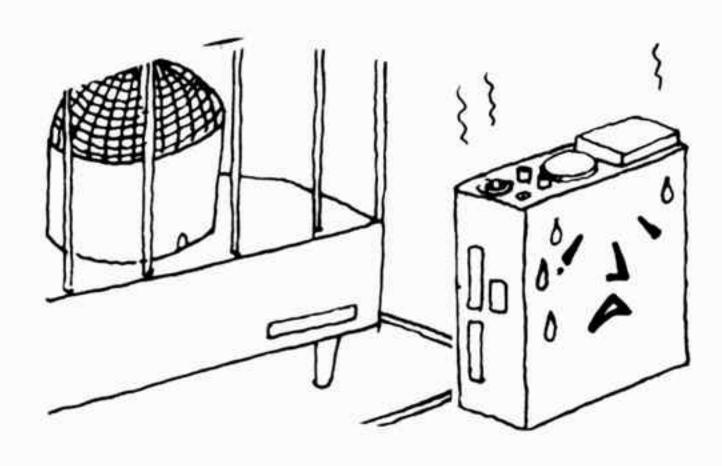


Do not leave the set in direct sunlight, especially in a closed parked car. Do not keep near the radiator or other excessively warm place.

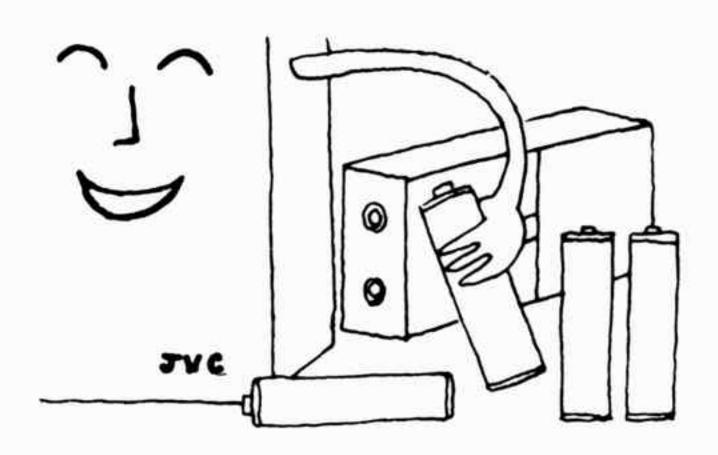

Remove the batteries from the set to protect from possible battery leakage when the set is not operated for a long period of time.

# NAMES OF PARTS AND THEIR FUNCTIONS

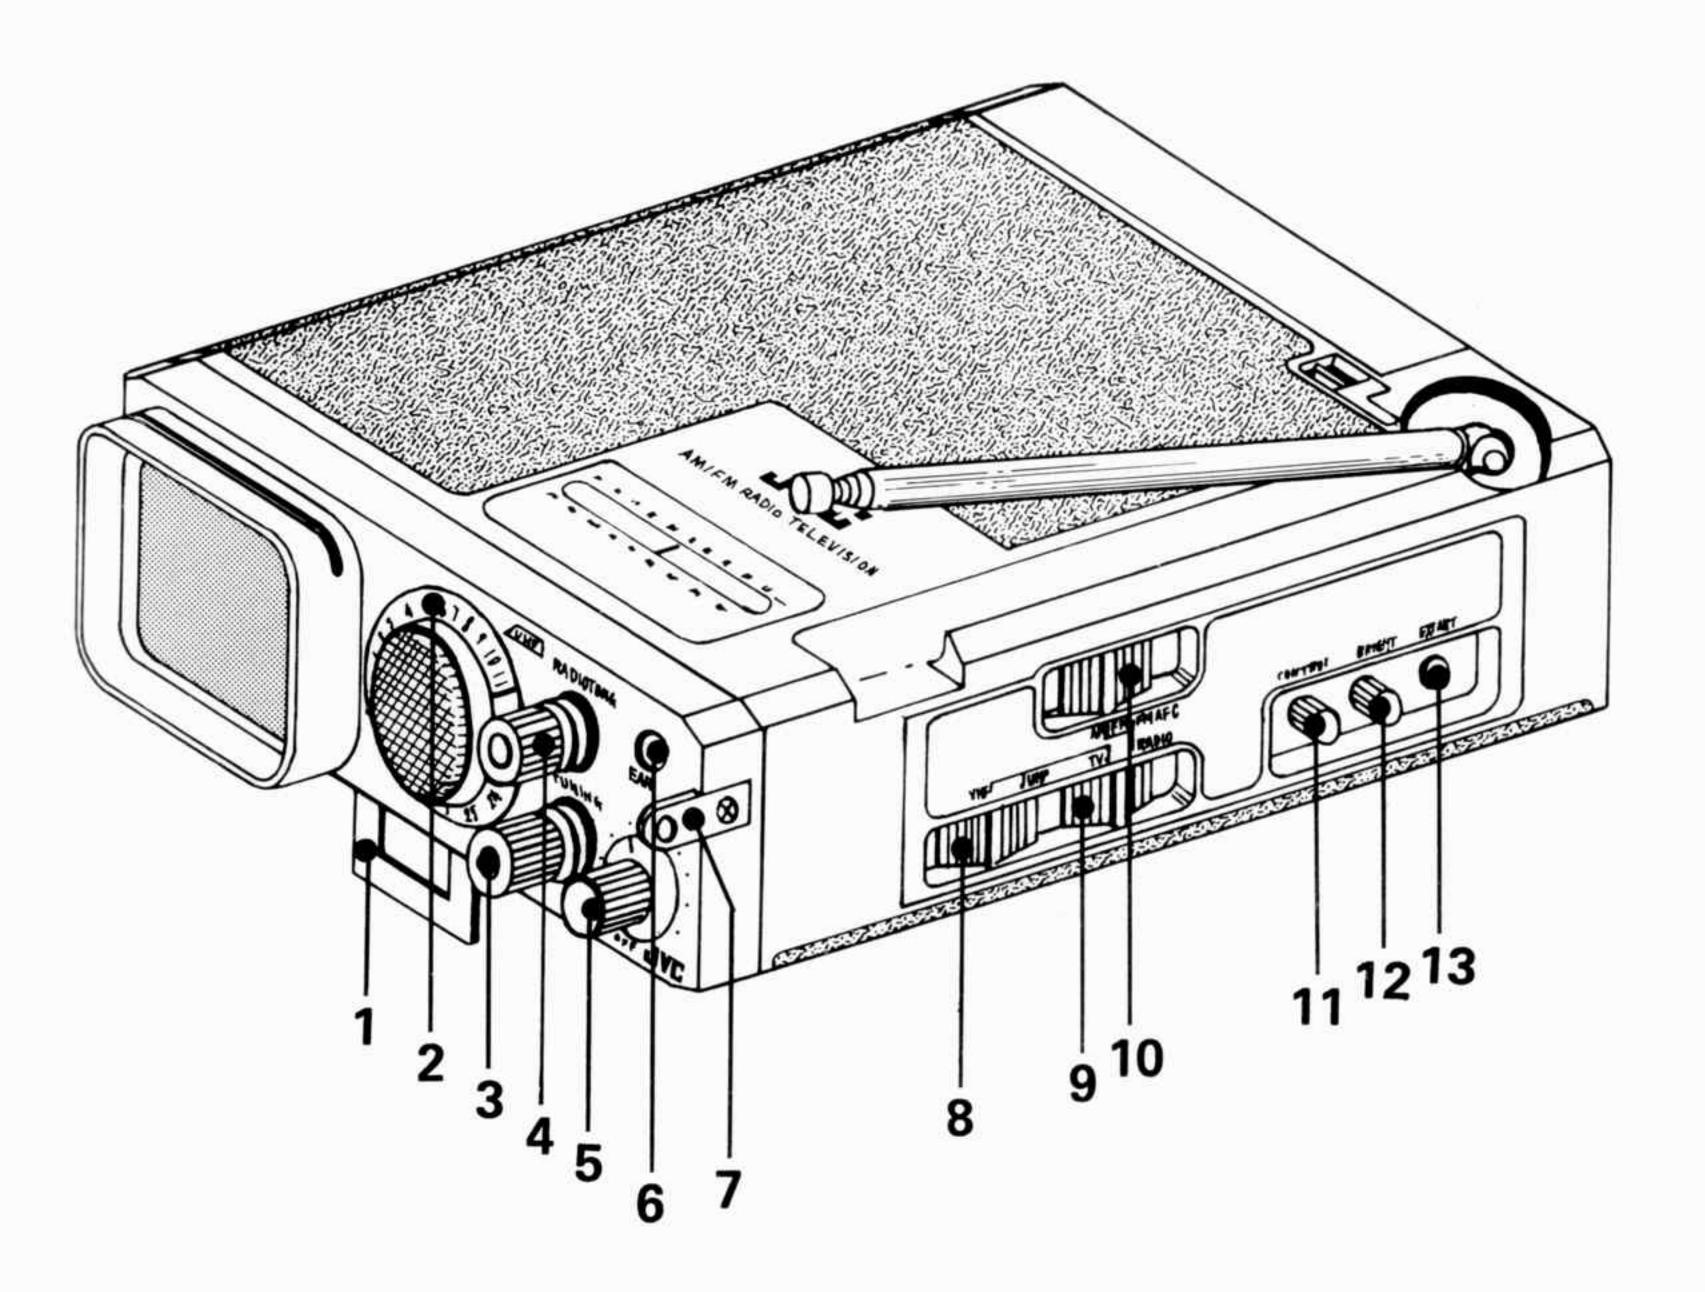

1. STAND

Collapsible

2. TV CHANNEL INDICATOR

2-12 are VHF 21-69 are UHF

3. TV FINE TUNING

TV tuning control

- 4. RADIO TUNING
- 5. POWER ON-OFF/VOLUME

- 6. EARPHONE JACK
- 7. METAL FITTING


For attaching the belt of the carrying bag supplied

8. VHF-UHF

Selector

9. TV-RADIO

Selector

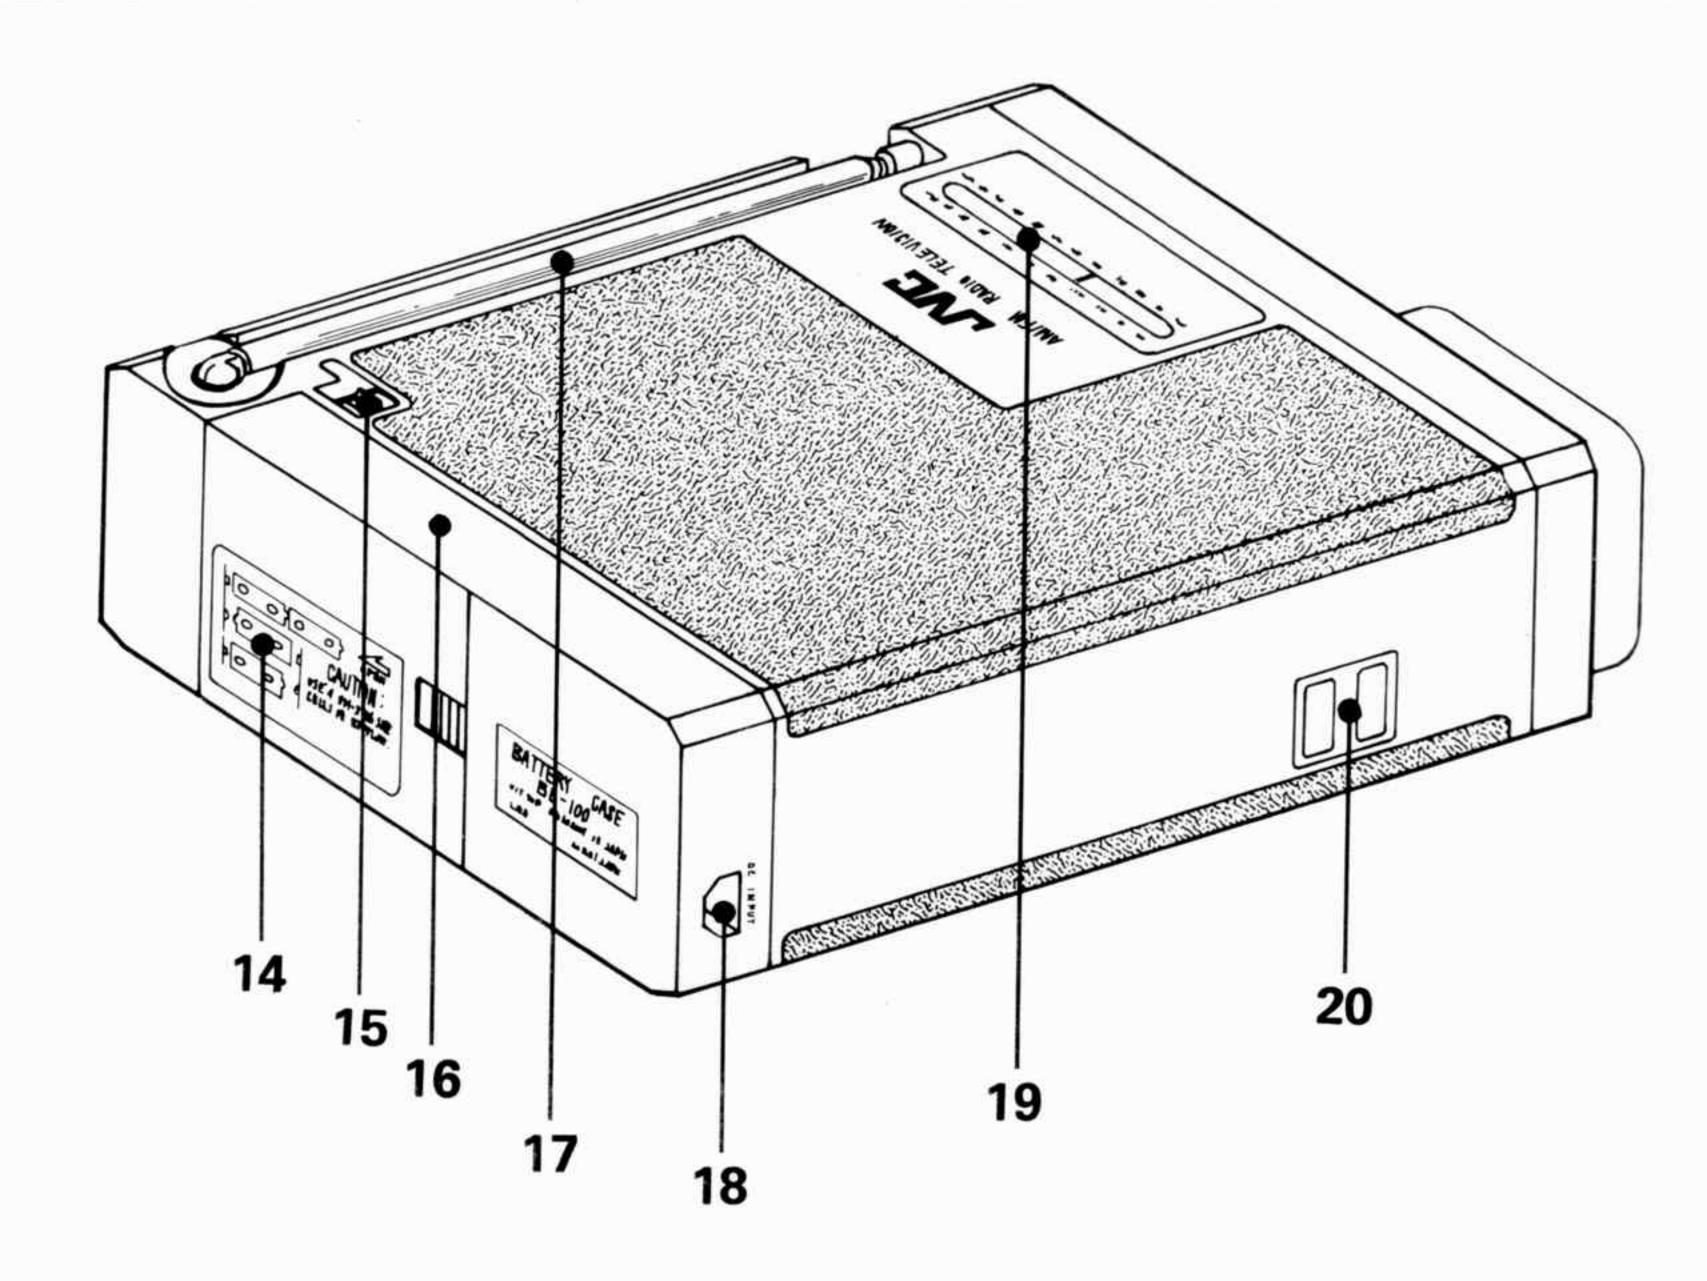

- 10. AM-FM-FM AFC Radio band selector
- 11. CONTRAST

  Contrast control
- 12. BRIGHT
  Brightness control
- 13. EXT ANT External antenna jack (75 $\Omega$ )
- 14. COVER OF BATTERY CASE

- 15. LATCH
  For battery case
- 16. BATTERY COMPARTMENT.
- 17. ROD ANTENNA
- 18. DC INPUT


  External DC input jack
- 19. RADIO TUNING DIAL
- 20. METAL FITTING

  For attaching the belt of the carrying bag supplied

# BEFORE USING THE SET

### How to remove the battery case


While pulling the latch in the arrow 1 direction, pull the battery case to arrow 2.

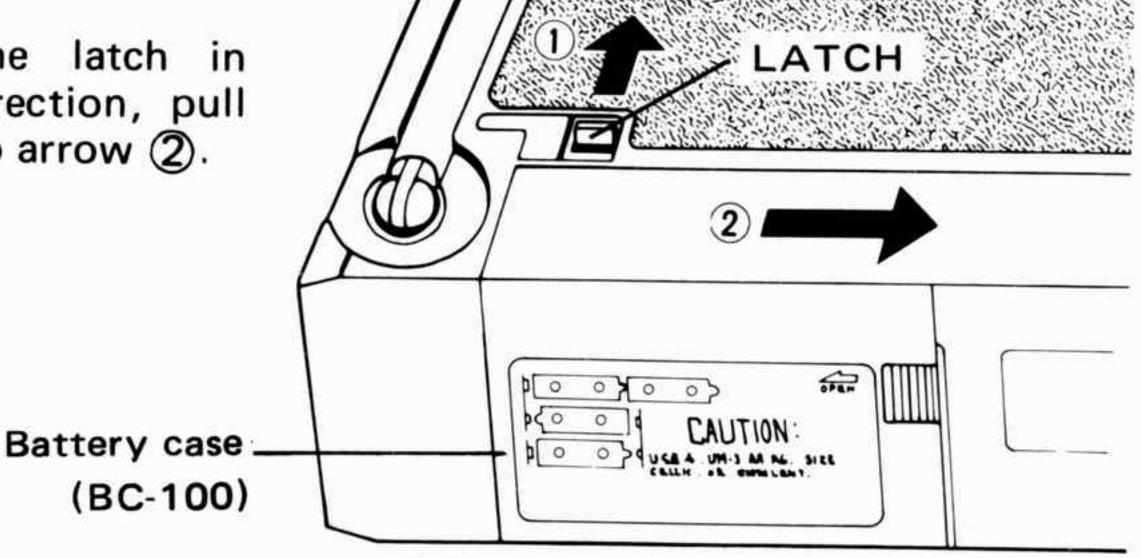

## How to attach the battery case


After inserting the four tabs of the set into the openings of the battery case, push the battery case in the arrow's direction.

4 tabs for attaching the battery case

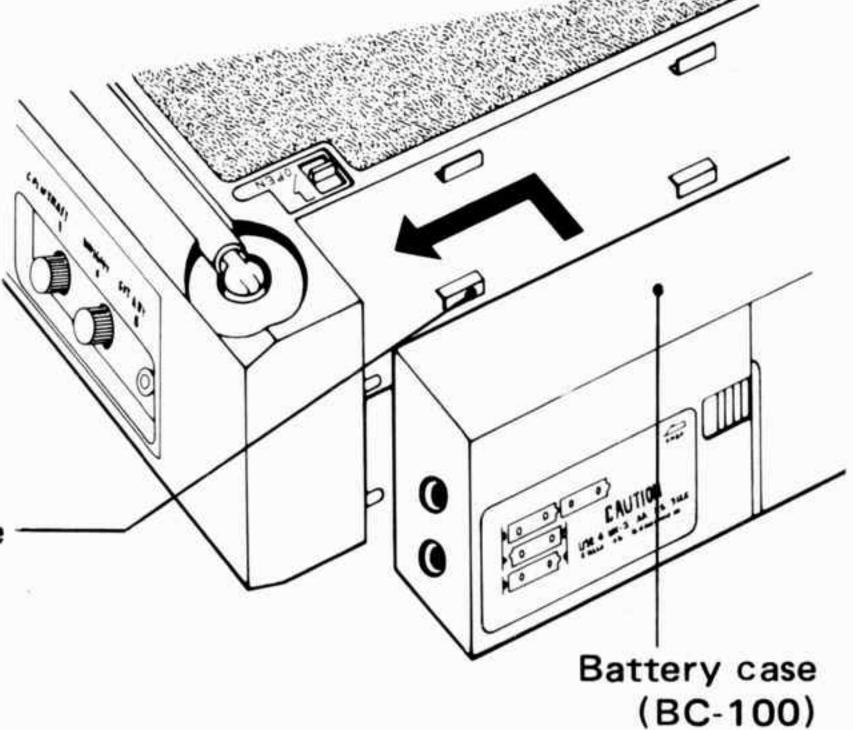


#### How to use the STAND


The stand is collapsible. Take the stand out to position as indicated to raise the set to a more convenient viewing angle.

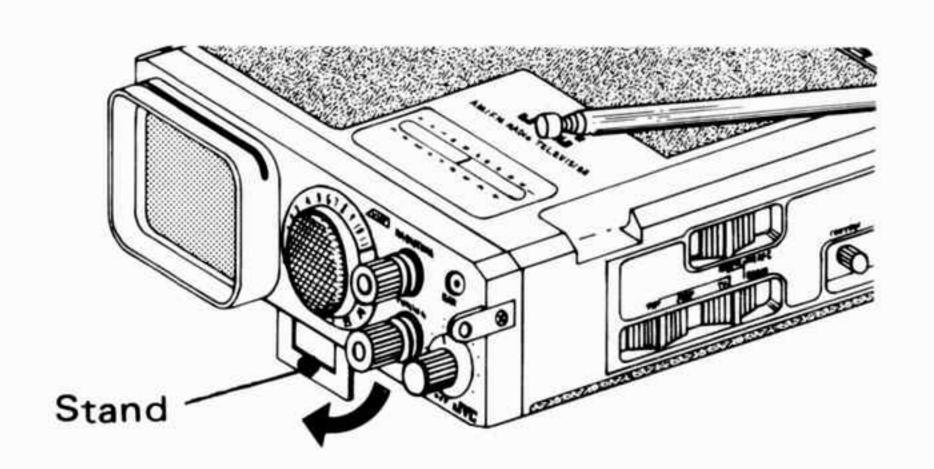

#### How to hang the shoulder belt

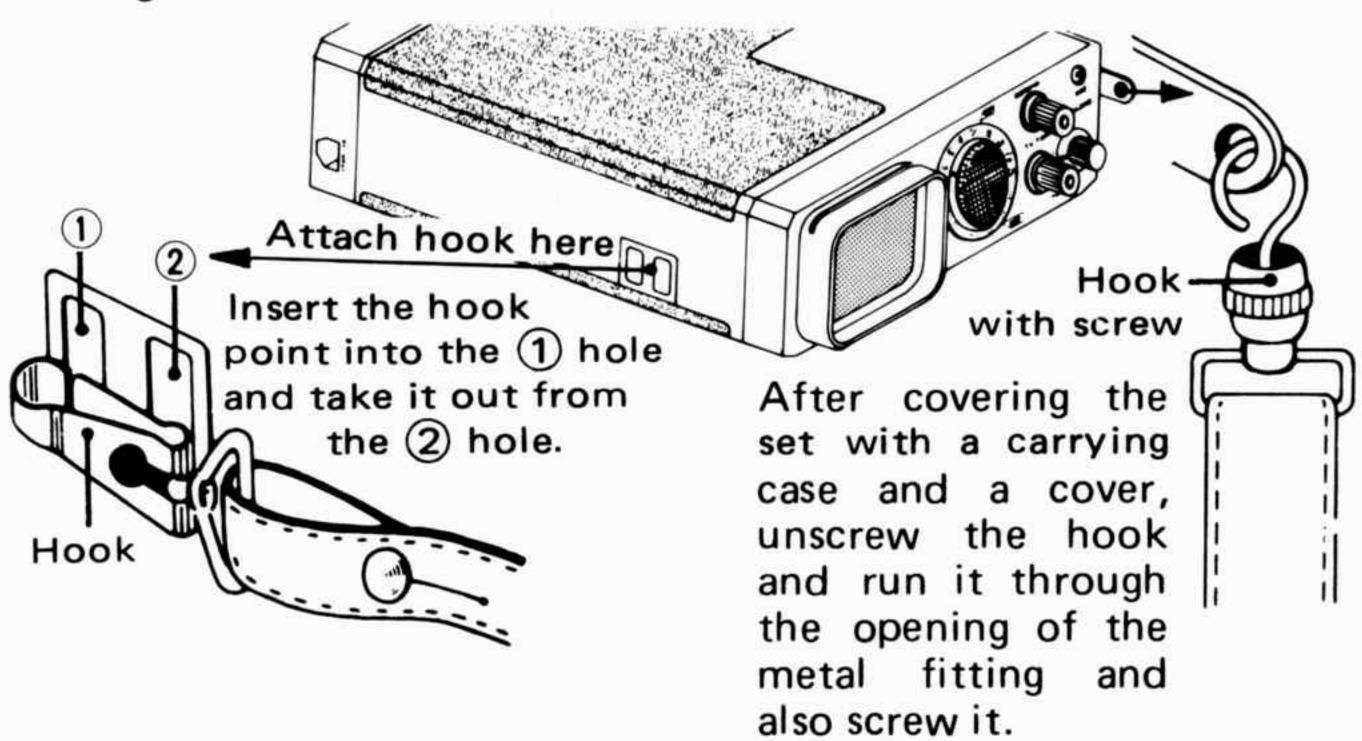


### How to affix the hood

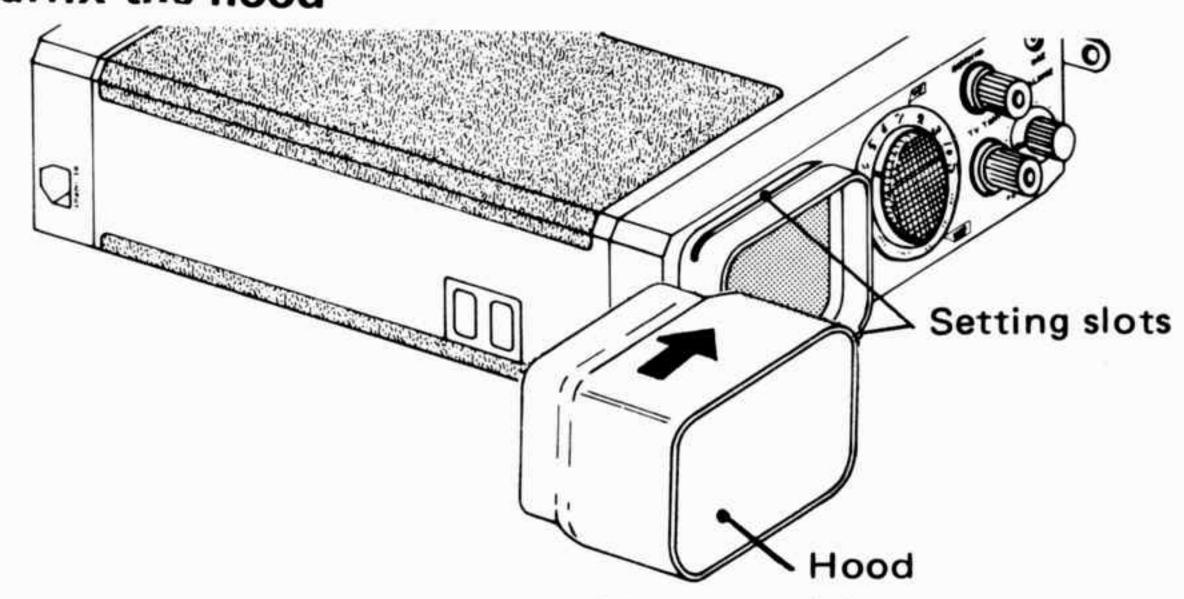

To assist viewing when ambient light condition are high, insert the hood supplied between the slots on the upper and lower sides of the TV screen from the arrow direction. Do not insert the hood in from full face of the screen or opposite direction of the arrow.

### Viewing the magnifying screen

Use an optional magnifying lens (Model TM-100) available from your JVC dealer. The magnifying size by this lens is 1.4 times.

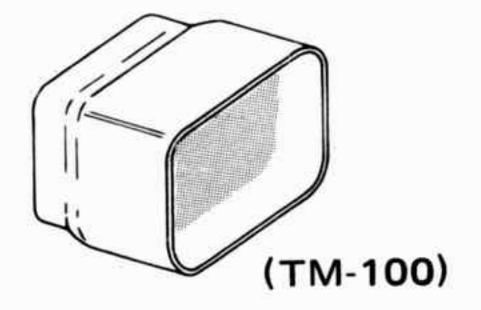


# POWER SUPPLY

#### Using dry cell batteries

After remove the battery case from the set, press the cover in, then slide it in the direction of the arrow.

Insert four "R6"-size batteries in the battery case according to the  $\oplus$   $\ominus$  polarity indications shown in the compartment, then replace the cover.

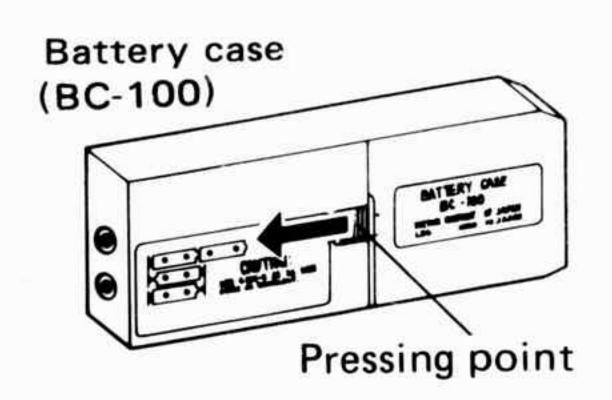

#### Caution:

If the AC adaptor or the car battery is connected to the DC INPUT jack, the cell operation will be switched off automatically.


The battery life for continuous operation													
Class	SUM-3	AM-3	Ni-Cd rechargea- ble battery pack (BP-100)										
TV	approx. 1.5 hours	approx. 4 hours	approx. 2 hours										

### Using precautions for dry cell battery

- Do not take mixed using of exhausted and powerful battery or of different type.
- Do not charge unrechargeable battery.
- Do not discard or leave the cell in fire or at a place with high temperature.
- Never short positive (+) pole of battery to negative (-) pole.

#### Using house current


After attaching the battery case to the set, connect the DC cord of AC adaptor (AA-24LEU) supplied to the DC INPUT jack of the battery case and the AC plug to house current outlet.

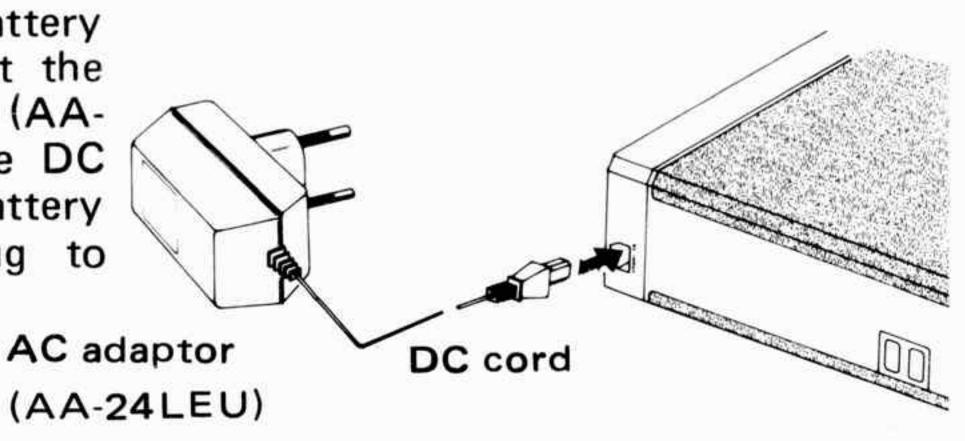

The rating of the AC adaptor (AA-24LEU) is indicated as AC 240V 50Hz, but this adaptor can be operated on from AC 220V to AC 240V

### Using car battery Power 12V DC


Using an optional car adaptor (AP-100) available from your JVC dealer. Refer to the instruction booklet of the car adaptor (AP-100) for details.

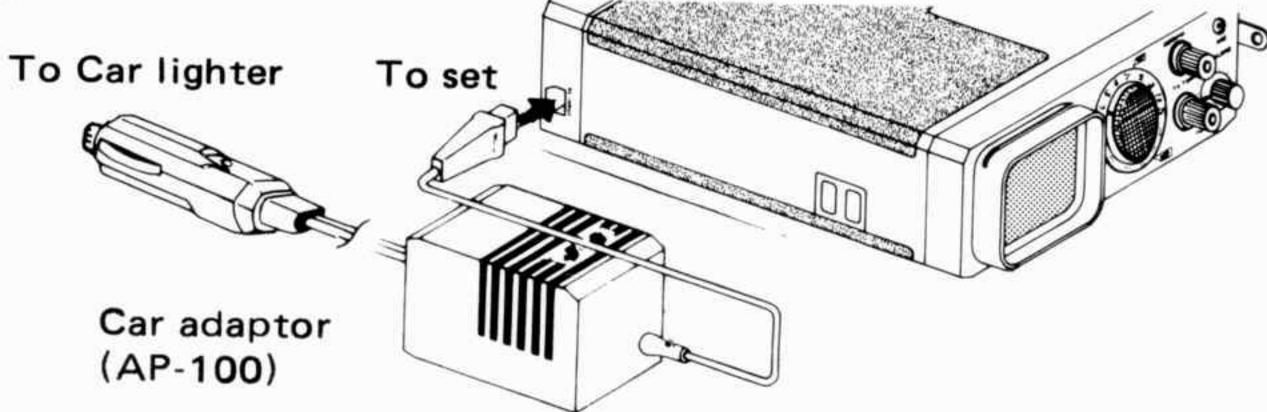

### Using optional rechargeable battery pack (BP-100V)

Remove the battery case from the set and replace with this battery pack. Turn the set on and enjoy the TV or radio.

This battery pack may be recharged more than 300 times if it is used adequately.

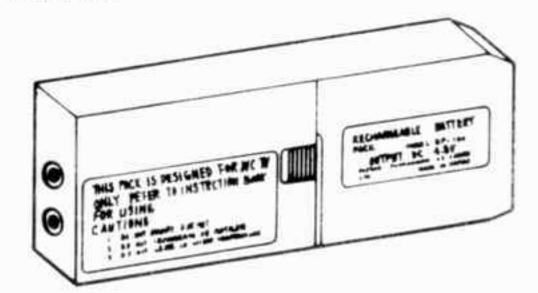


Rechargeable battery pack (BP-100V)

### Using optional AC power adaptor (AA-100SEU)

Optional AC power adaptor (AA-100SEU) available from your JVC dealer is designed for operating the set on AC current or charging the rechargeable battery pack (BP-100V).


Refer to instruction booklet supplied with the AC power adaptor for charging details, etc.

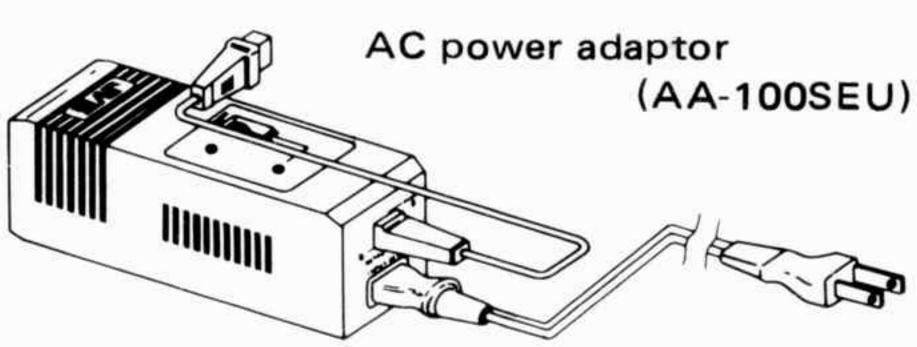

# ANTENNA


#### Using rod antenna

In normal strength signal areas, using the built-in rod antenna is recommended but it is not effective for AM radio reception.

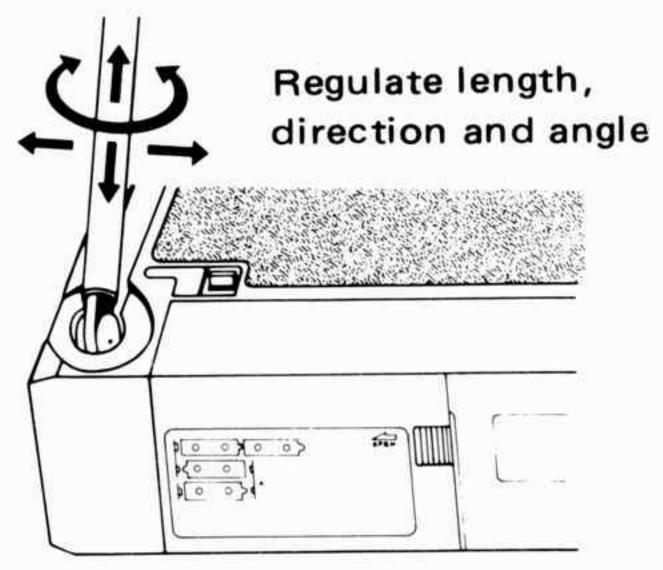

### ... Reception of AM broadcasts


A built-in ferrite core antenna is provided for AM reception. Rotate the set, itself, slowly to find the position for best reception.

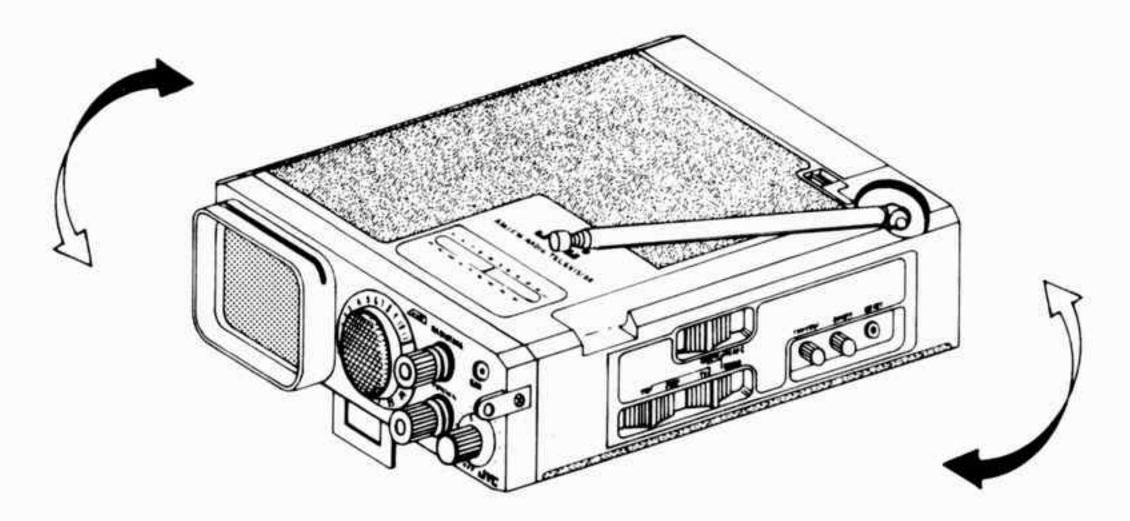

#### Reception in weak signal areas


In weak signal areas such as in a concrete building or a far way place from the station, it may be necessary to install an outdoor antenna for the best reception.

In this case, use an optional external antenna connector (Model AE-100) available from your JVC dealer.

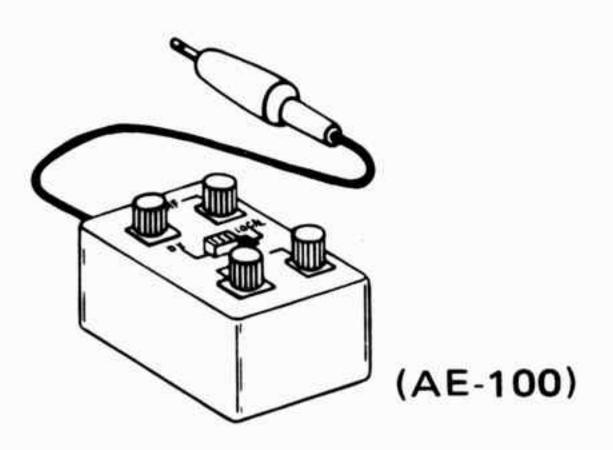

# VIEWING THE TV OPERATE IN NUMERICAL ORDER


Provide the proper power source and antenna as previously described.

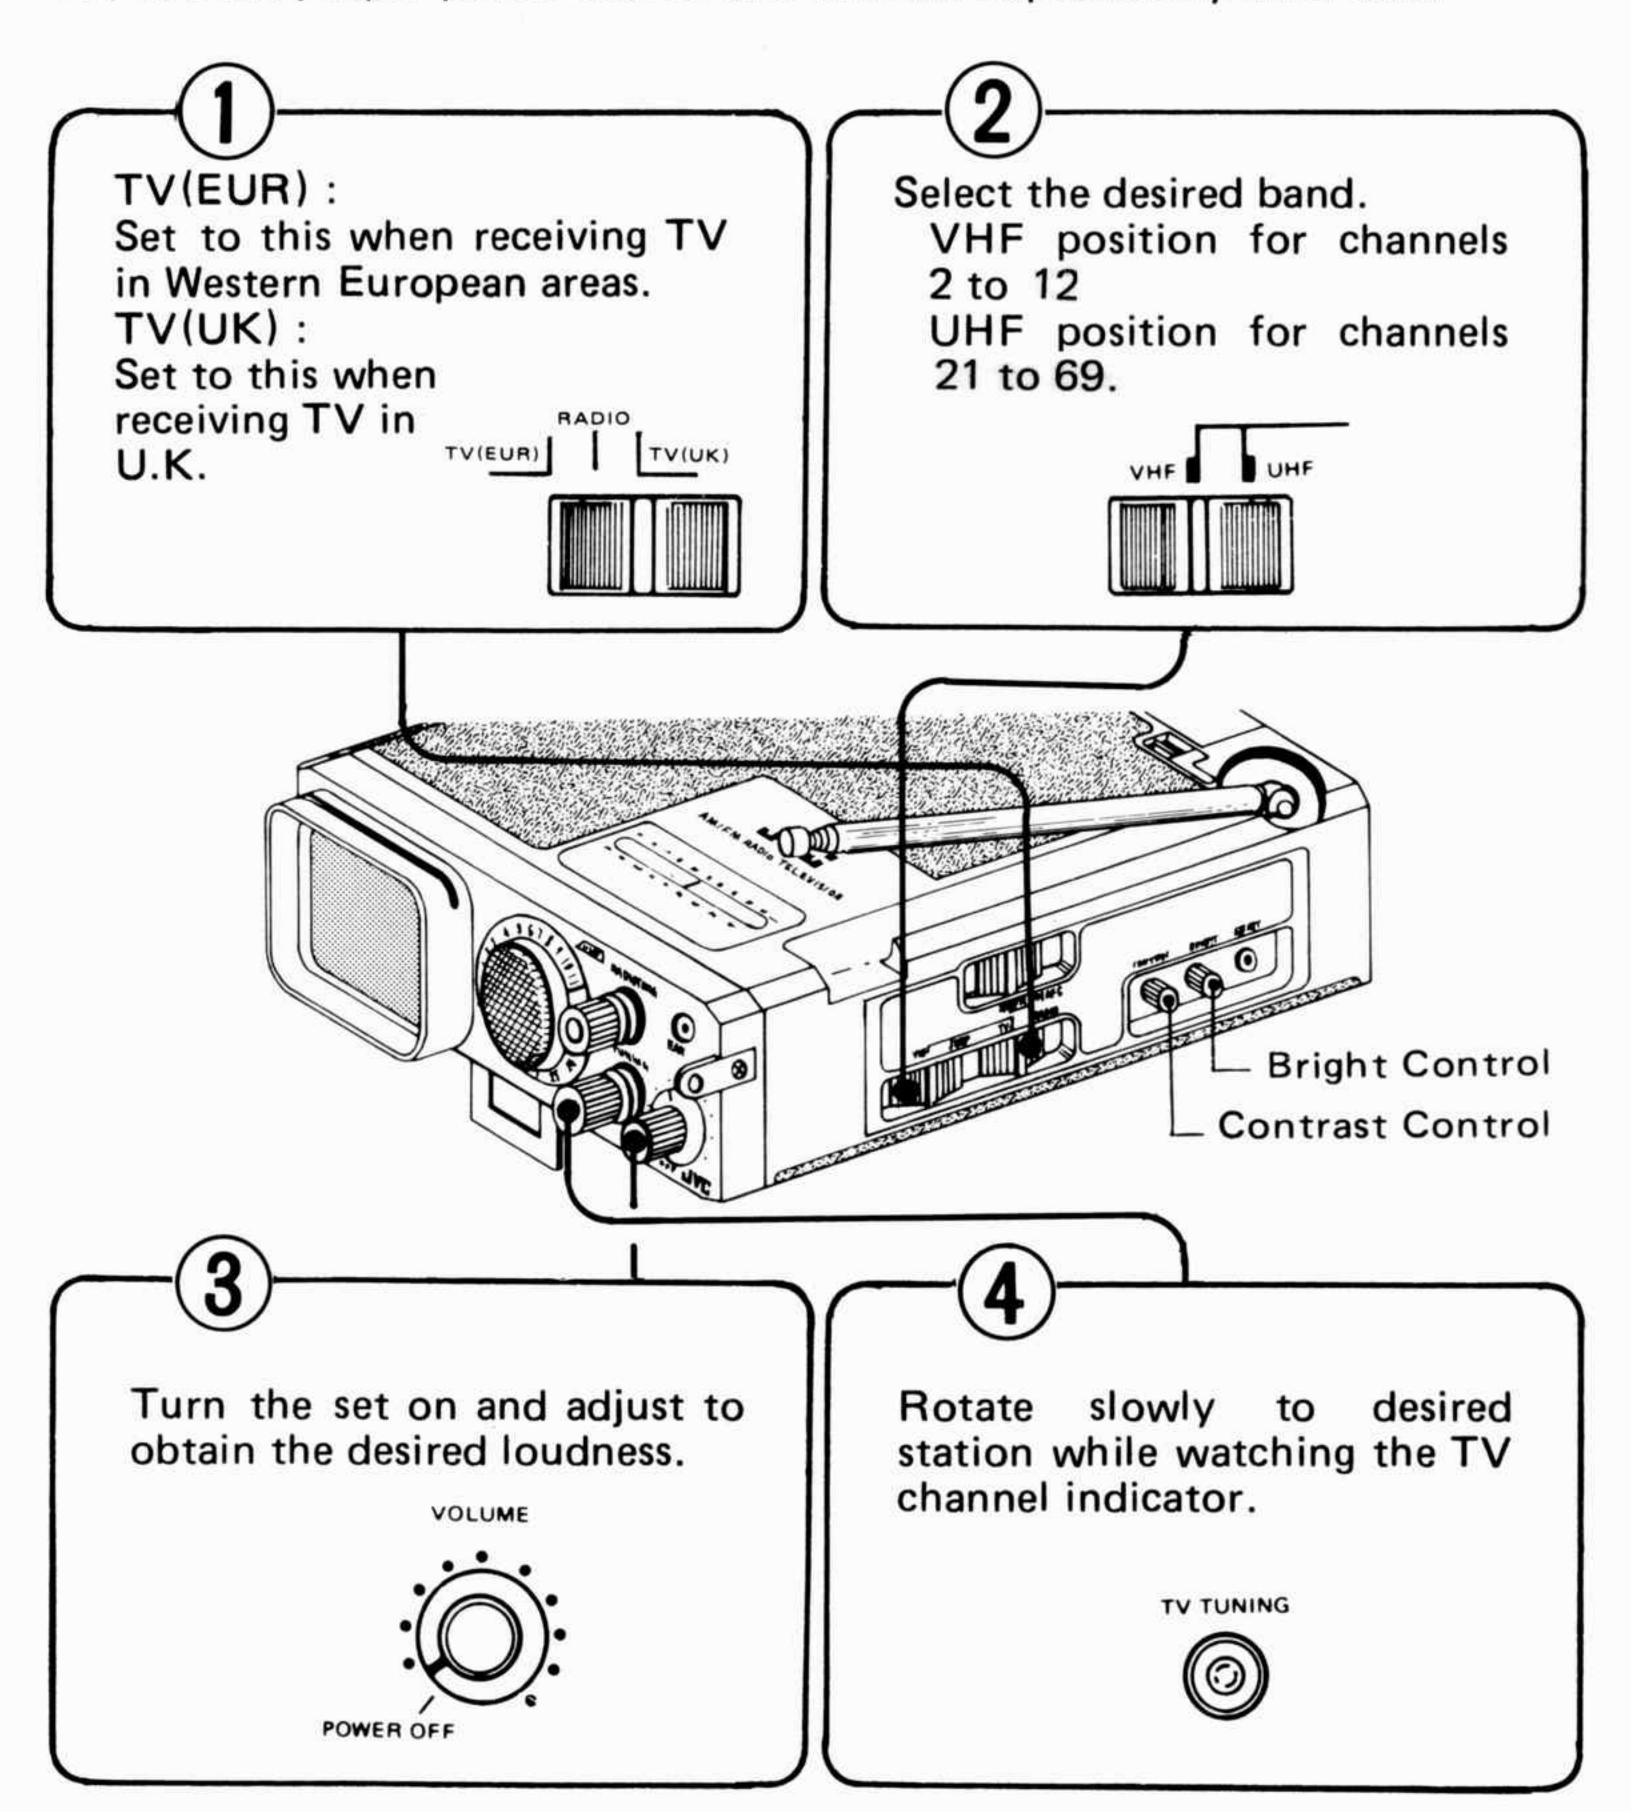

 Adjust the bright and contrast controls located on right side to obtain the best picture.

# LISTENING TO THE RADIO OPERATE IN NUMERICAL OPERATE IN NUMERICAL

Provide the proper power source and antenna as previously described.

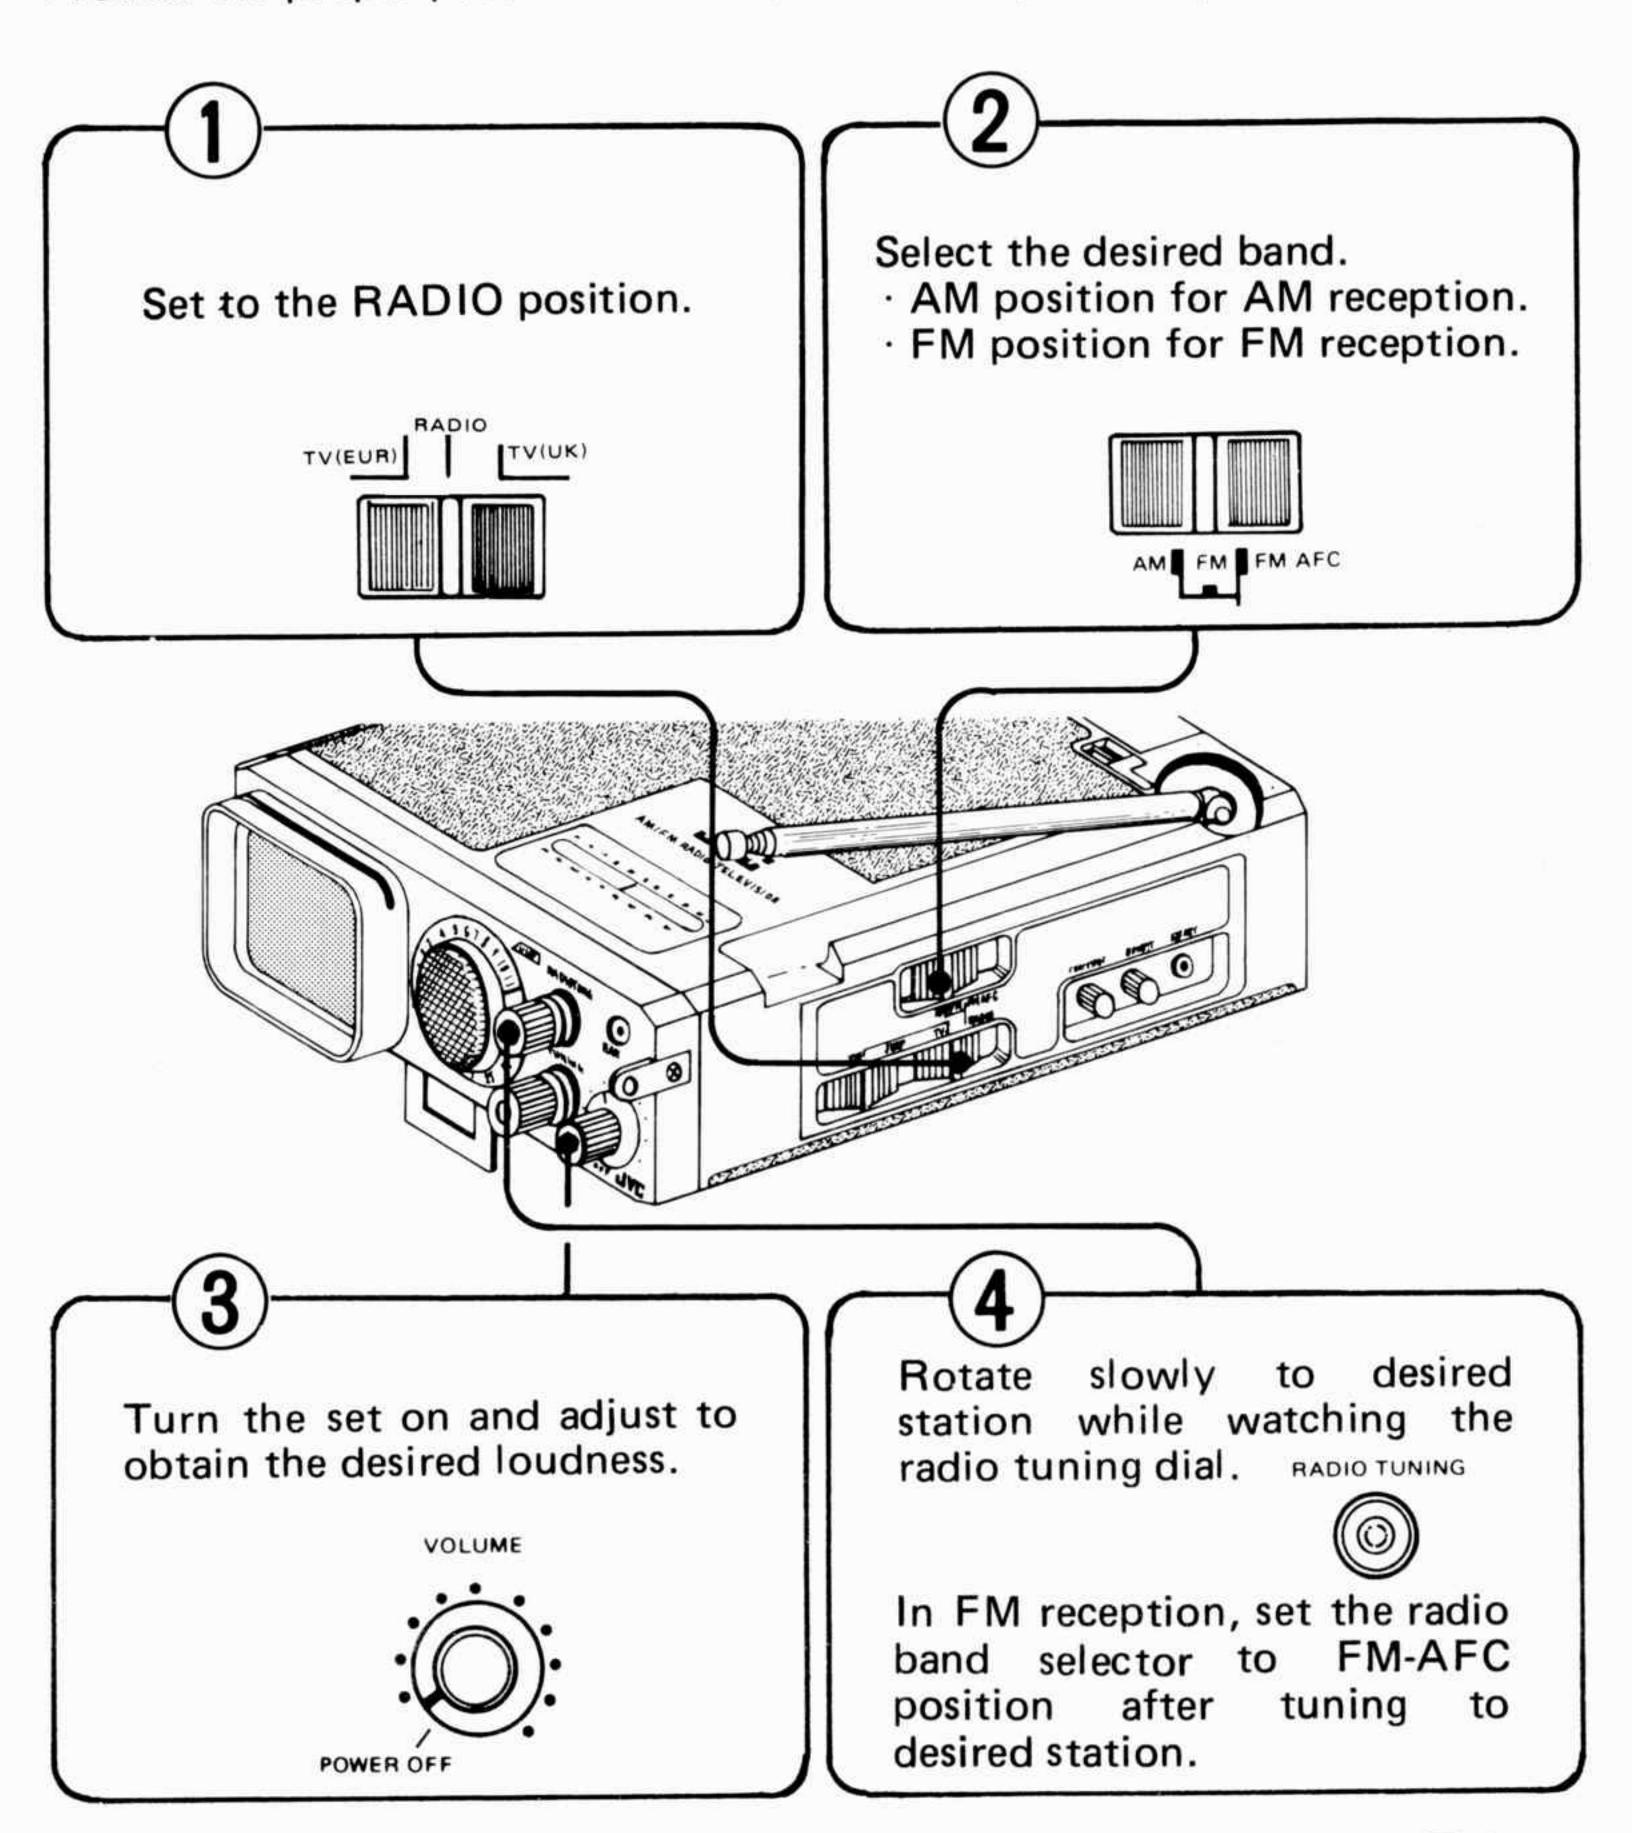

 Use the dynamic earphone supplied when privately listening to TV or radio.

# SPECIFICATIONS & ACCESSORIES

TV standard : CCIR TV standard system

SOUND IF : 5.5/6.0MHz

Receiving channels : CCIR VHF channels 2-12 & UHF 21-69

Radio frequency range: FM: 88 – 108MHz

AM: **540** – 1,600kHz

TV tuner : Contactless electronic tuner

Picture tube : 2.0 inch, picture measured diagonally, 40 degree

deflection

Antenna : Built-in rod antenna for TV and FM radio and,

Built in ferrite antenna for AM radio

Speaker : 3.8cm, round type ( $16\Omega$ ) 1 pc

Audio output : 150mW max. (130mW at 10% distortion)

Semi-conductors : 3 ICs, 43 transistors, 49 diodes

Power input : Size-R6 batteries 4 pcs, AC 240V 50Hz with

AC adaptor (AA-24LEU) supplied, DC 12V car battery with Optional car adaptor (AP-100) or optional rechargeable battery pack

(BP-100V)

Power consumption : 1.7W on DC (Receiving TV)

Dimensions : 53m/m(H) x 148m/m(W) x 187m/m(D)

Weight : 1.0kg (without batteries)

#### AC adaptor Model AA-24LEU

Power input : AC 240V 50Hz
Power output : DC 6V 300mA

Semi-conductor : 1 transistor, 5 diodes

Dimension : H-87m/m, W-75m/m, D-55m/m

Weight : 430g

#### Accessories

																		Q	l'ty
AC adaptor (AA-24LEU)		•					*		,			: <b>.</b> :				•	•	•	1
Dynamic earphone		٠	٠	•		•	•			٠		•	٠	٠	•	٠	•	•	1
Hood with case			•		1.0	;. <b>•</b> .			1:01				( <b>•</b> )			: <b>:</b> (0)			1
Carrying bag with belt					(*)	9 <b>.6</b> 6			:=:		•	•				٠		т.	1